

Domestic Roller Shutters Ltd

Unit 1 Sycamore Court, Manor Park
Runcorn, Cheshire, WA7 1RS


EUROKIT - MINI Installation Instructions




Drawing No:	DRS-D006
Revision No:	A
Drawn By:	JK
Checked By:	CSH
Page No:	1 of 1
Revision Date:	13/04/12
Date:	13/04/12
Approved By:	DET

Tube Motor Connections


If The Motor Operates In The
Wrong Direction, Interchange
The Brown And Black Tube
Motor Cable Cores

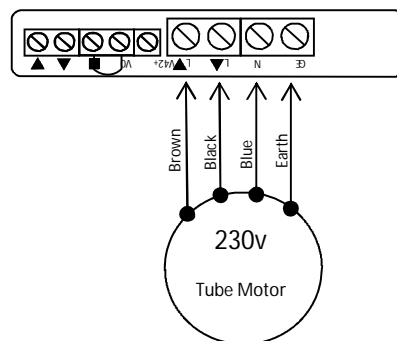


Keyswitch Connections

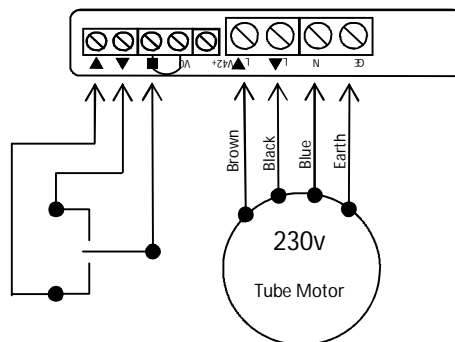

Photocell Connections

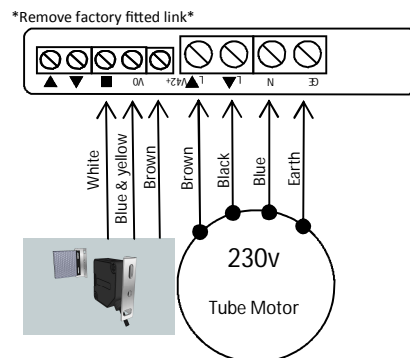

*Example shown is connection to a DRS photocell

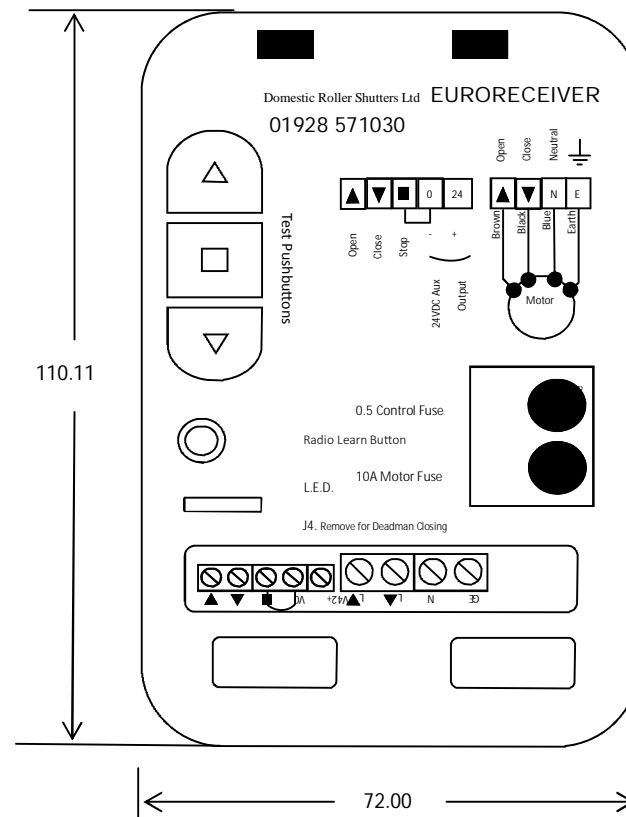

Transmitter Programming Procedure

1. Press the 'Radio Learn' button on the Euroreceiver for one second
2. Status LED on the Euroreceiver turns red
3. Press any button on the transmitter TWICE
4. Status LED flashes quickly to indicate successful programming
5. Status LED returns to green
6. Repeat procedure for further transmitters (maximum 30 handsets allowed)
7. To erase ALL transmitters, continuously hold the 'Radio Learn' button for eight seconds. Individual transmitters cannot be erased